
K2 Harness Pinout				
Channel Number on mObridge	Туре	Colour	Power	Location in BMW
1	Sub	Red = +, Black = -	400w RMS 20hm, 250w RMS 4 ohm	
1	Sub x2 (bridged internally)	Red w/ silver = +, Black w/ silver = -		Center Channel/Spare unjoined wire
2	Normal power	Purple = +, Purple w/ silver = -	75w RMS 4ohm	Rear Left Door
3	Normal power	White = +, White w/ silver = -	75w RMS 4ohm	Rear Right Door
4	Normal power	Yellow = +, Yellow/ silver = -	75w RMS 4ohm	Rear Right
5	Normal power	Blue = +, Blue w/silver = -	75w RMS 4ohm	Front Left
6	High power	Green = +, Green w/silver = -	150w RMS 2ohm, 130w @ 4ohm	Right Underseat woofer
7	High power	Orange = +, Orange w/silver = -	150w RMS 2ohm, 130w @ 4ohm	Left Underseat woofer
8	Normal power	Grey = +, Grey w/ silver = -	75w RMS 4ohm	Front Right
9	Normal power	Brown = +, Brown w/ silver = -	75w RMS 4ohm	Rear left
N/A	Remote Trigger OUT	Pink w/ silver	14v	
10	Preout	RCA Jack		
N/A	Power +	Red (Thick Guage)		Power
N/A	Power -	Black (Thick Guage)		Ground
Phase can be swapped in DSP				

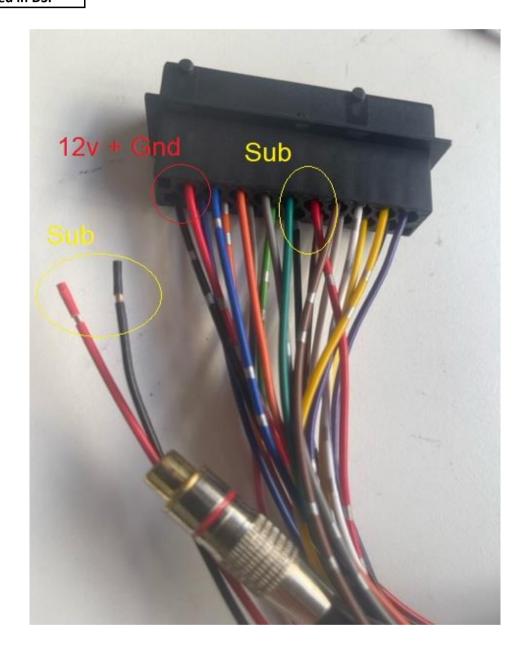

_	
e	
с.	
_	
-	
-	
_	l
	l
-	

,